


Uspa   
**Operating  
Instruction Manual**

**UB-6635R / 6635RS / 6635RU**

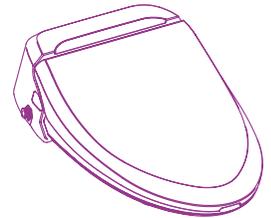

- *Thank you for purchasing this USPA product*
- *You are kindly requested to read this manual carefully for proper use of this appliance*
- *Please save this manual and place it in an easily accessible location*
- *Please register warranty for proper service*

**THIS UNIT WAS MANUFACTURED FOR HOUSEHOLD USE ONLY.  
READ ALL OPERATING INSTRUCTION BEFORE INSTALLATION.**

### Notes

1. *This product should be installed according to this manual.*
2. *Please read this manual carefully and install this appliance properly.*
3. *Please save this manual and place it in an easily accessible location.*
4. *Do not attempt to repair this appliance by yourself. Doing so could void the warranty.*



This marking shown on the product or its literature indicates that it should not be disposed of with other household waste at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial waste for disposal.

## Table of contents

### PREPARATION

1. IMPORTANT SAFEGUARDS	1
2. CAUTIONS BEFORE INSTALLATION	2
3. IDENTIFICATION	3
4. SAFETY INFORMATION (DANGER)	4
5. SAFETY INFORMATION (WARNING)	6

### HOW TO USE

6. HOW TO USE	8
7. HOW TO CLEAN	12
8. MAINTENANCE	13

### INSTALLATION

9. HOW TO INSTALL	14
-------------------	----

### ETC

10. BEFORE CALLING FOR SERVICE	16
11. SPECIFICATIONS	16
12. WARRANTY	17

# 1 Important Safeguards

## READ ALL INSTRUCTIONS BEFORE USING

### **DANGER - To reduce the risk of electric shock:**

1. Do not place or store this appliance where it can fall or be pulled into a tub or sink.
2. Do not place in, or drop into water or other liquid.
3. Do not reach for a product that has fallen into water. Unplug immediately.

### **WARNING - To reduce the risk of burns, electric shock, fire or injury to people:**

1. Close supervision is necessary when this appliance is used by or near children, elderly or invalid. Children should not be permitted to use or touch this appliance without the supervision of an adult. Be sure to adjust the temperature of the toilet seat for the elderly, those who are incapacitated or people with sensitive skins.
2. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged or dropped into water.
4. Install this appliance properly according to this manual.
5. Only authorized people can install or repair this appliance. Do not attempt to repair this appliance by yourself, doing so could void the warranty.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any object into any opening or hose.
8. Do not use outdoors. Do not use aerosol or oxygen spray products on the unit.
9. Always follow the grounding instruction in this manual before plugging in.
10. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified people in order to avoid a hazard.
11. This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with this appliance.

## SAVE THESE INSTRUCTIONS

## 2 Cautions before installation

### NOTE THE FOLLOWING IMPORTANT POINTS

1. Do not install in location where water might be splashed on this appliance or in location exposed to such an excessive moisture that condensation forms on the product surface.
2. To avoid damage to electronic components due to high levels of humidity, provide adequate ventilation by opening a window and/or door when bathing. You may find operating an exhaust ventilating fan during these times of high humidity beneficial.
3. The new hose-set supplied with the appliance should be used and the old hose-set should not be reused.
4. Use a water supply having a water pressure 0.08 MPa ~ 0.74 MPa.
5. Connect the product to a pipe carrying potable water. Do not connect to an industrial water line or other water supply that does not carry water of drinking quality.
6. In areas where water freezes during winter make arrangements to keep the pipes warm. The water remaining in the unit may sometimes freeze during storage in winter. In that case, warm the unit in the room before installation.
7. The thermal protector in the water tank may sometimes trip during storage or transportation in warm weather causing non-operation. In that case, cool the unit in the room before installation.
8. The rated power voltage is 220-240 V~ / 50/60 Hz
9. Do not supply electrical power to the unit until the plumbing installation work has been completed; it could cause malfunction.
10. Unplug the appliance during maintenance and cleaning.




### WARNING

**Before installing this product, always observe the local laws and regulations regarding installation.**


In countries where power outlets are not permitted in bathrooms, such as U.K. or Ireland, please consult a qualified electrician for advice on connecting this unit to a power supply. The European two-pin plug should be removed and the unit should be connected to the mains by a qualified electrician.

In such countries, every time the operating instruction manual refers to unplug the power cord, the user must instead switch off the circuit.

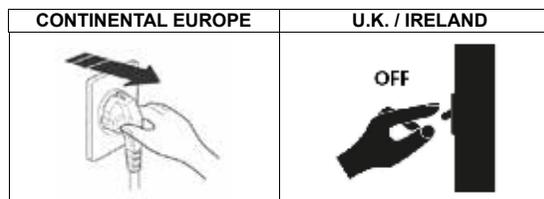


# 3 Identification

## 1. Main unit

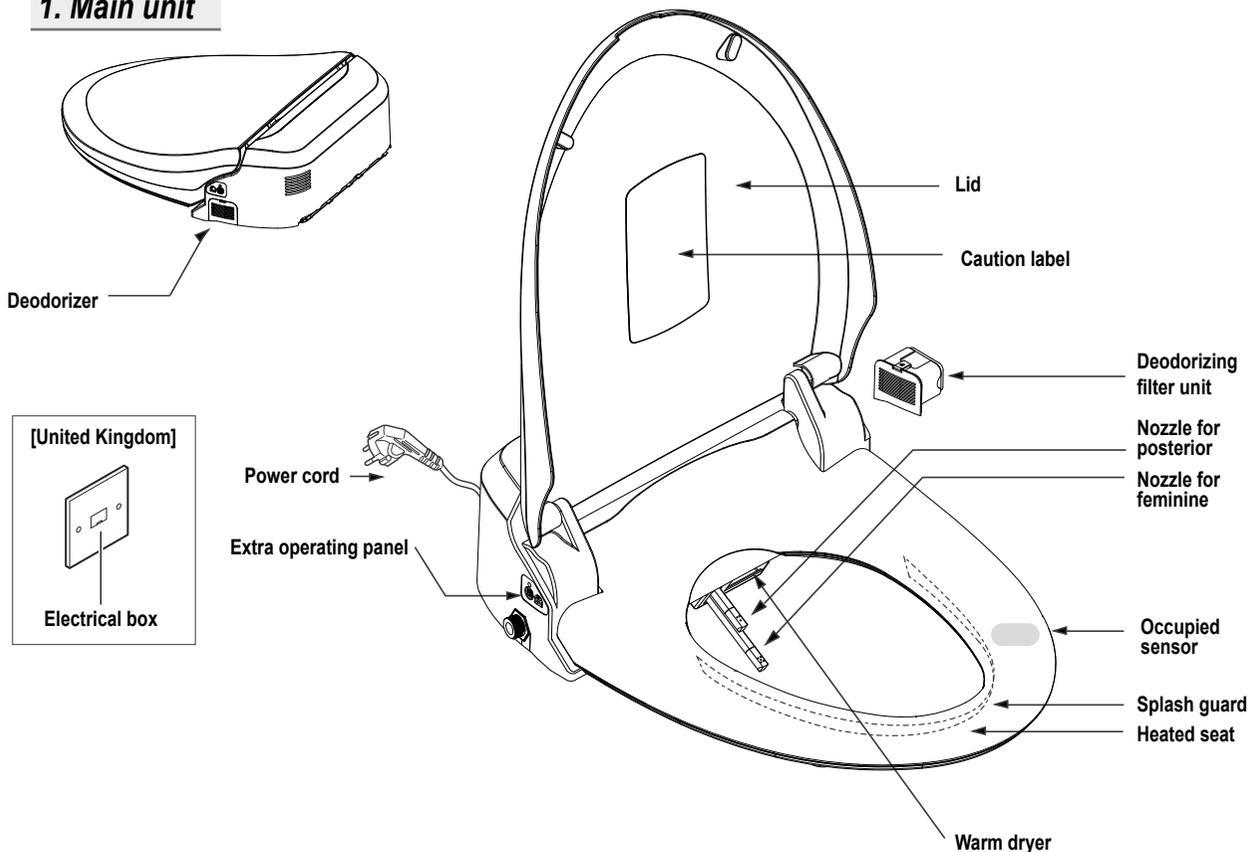


## 2. Accessories
 
### <Fischer Kit>



Mounting bolt (2pcs)

 


Washer (2pcs)



Spacers (2pcs)



 
Upper cone (2pcs)




Mounting nut (2pcs)



 Lower cone (2pcs)



 Water hose (120 cm)  
Elbow connector (2pcs 1/2")



T-valve (1/2") T-valve (3/8")



Deodorizing filter  
(equipped with this unit)



Extra foot seat (2pcs)



Bolt guide (2pcs)



Mounting plate (2 types)



Remote control



Remote control Bracket



Screw (2pcs)



Plastic anchor (2pcs)



Battery (AAA 3pcs)

# 4 Safety Information (Danger)



## DANGER

Please follow these basic instructions to ensure the safe use of your appliance



Indicates a prohibited use of the appliance



Indicates a required step in the use of this appliance



Prohibited



Do not handle with wet hands



Do not throw any firearms



Do not disassemble



Do not wash



Ground connection



Required step




Meanings of symbols



PROHIBITED

**Do not use a faulty or loose electric outlet or cord.**

- Doing so may result in a short circuit, electric shock or fire.

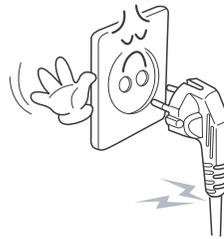

REQUIRED

**Do not obstruct the warm air dryer outlet.**

- If the outlet is obstructed with any object, it may result in fire.
- If the outlet is obstructed with hands, it may result in injury.



NO FIREARMS

**Do not throw anything flammable into the toilet.**

- Doing so may result in fire.



DO NOT WASH

**Do not wash this appliance with water.**

- Doing so may result in fire or electric shock.



GROUND CONNECTION

**Grounded wire or outlet must be installed.**

- If avoided, it may result in short circuit or malfunction, if no grounded wire.
- If no grounded plug is used, make sure to install grounded wire.





# DANGER


Please follow these basic instructions to ensure the safe use of your appliance



PROHIBITED

### Do not use many appliances in a multiple adapter.


- Doing so may result in fire or damage.
- Be sure to use a dry and clean outlet.
- Do not use a faulty or loose outlet.

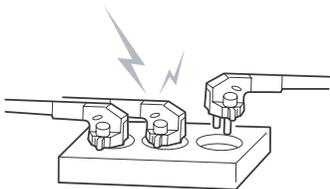

NO WET HANDS

### Plug and unplug properly.

- Do not plug or unplug with wet hands. It may result in injury or short circuit.
- Do not grab the cord when unplugging. Pull out the plug properly.

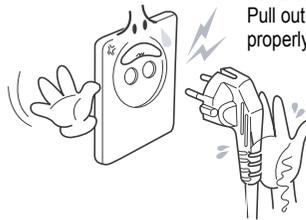

DO NOT DISASSEMBLE

### Do not use when the seat and lid are disassembled.

- Doing so may result in electric shock due to high voltage inside.



REQUIRED

### Unplug when beeping or smelling strangely.

- Unplug right away.
- Contact your dealer where you bought this appliance.



DO NOT DISASSEMBLE

### Do not disassemble, repair or modify this appliance.


- Doing so may result in fire or electric shock.



REQUIRED

### Use tap potable water only (ground water).

- Not doing so may cause irritation or injury to your skin.

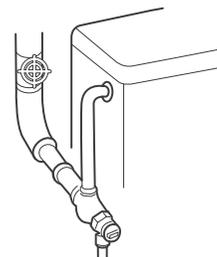

# 5 Safety information (Warning)



## WARNING

Please follow these basic instructions to ensure the safe use of your appliance



PROHIBITED

**Do not step on or place heavy objects on this appliance.**

- Doing so may damage the unit.
- Do not step on a lid, seat or control panel to avoid injury or damage.



REQUIRED

**Do not force the lid to close.**

- Doing so may cause malfunction.



REQUIRED

**Be aware of urine splash on a nozzle or warm air outlet.**

- Not doing so may result in smelling of products or failure.



PROHIBITED

**Do not sit or lean against the lid or control panel.**

- Doing so may cause malfunction or breakage.




REQUIRED

**Unplug while not using over extended period of time.**



REQUIRED

**Unplug while there is a thunder or lightning.**

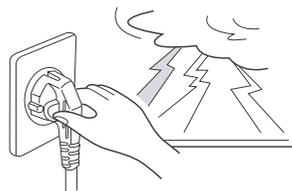



# WARNING

Please follow these basic instructions to ensure the safe use of your appliance



PROHIBITED

## Do not pull out water hose forcefully.

- Doing so may cause water leakage.



REQUIRED

## Use this appliance on a toilet only

- Not doing so may result in fire, injury or electric shock.



~~Improper use~~



PROHIBITED

## Do not put a vase cup or small materials on this appliance.



REQUIRED

## Be aware of a low-grade burn.


- It may result in a low-grade burn if sitting on the heated seat for a long time.
- Be aware if being used by the following:
  - Children, senior citizens, patients, or who cannot control the grade of temperature.
  - Sleeping pills users, or people who are on medication that causes drowsiness.
  - Who are drunk or very tired and may fall asleep while sitting on the unit.
- If injured in a low-grade burn, see a doctor immediately.



REQUIRED

## Unplug when cleaning.


- Not doing so may result in fire or electric shock.

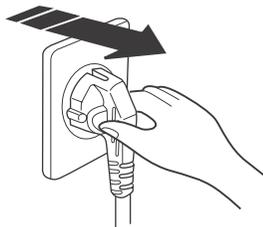

REQUIRED

## Use the low temperature for children and disabled.

- If high temperature is set up, it may result in burn due to not recognizing the temperature.

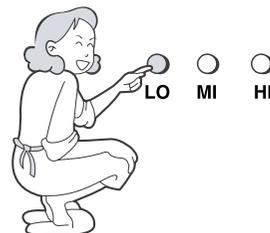

## 6 How to use



### Dry

- Press this button to activate warm drying for 3 minutes.
- To alter the intensity of the dryer, press the button again.
- Drying temperature can be adjusted by pressing LOW or HIGH (5 levels).



### Bidet

- Press this button to activate feminine wash. The function will stop automatically after 1 minute.
- Press this button again to activate oscillation. The nozzle moves automatically back and forth to widen cleansing area.
- To stop oscillation press again this button.



### Cleansing

- Press this button to activate posterior hygiene. The function will stop automatically after 1 minute.
- Press this button again to activate oscillation. The nozzle moves automatically back and forth to widen cleansing area.
- To stop oscillation press again this button.



### User setting

- ※ See page 10



### Stop

- Press this button to stop current operation.
- When the user stands up, all operation will automatically stop.



### Eco

- Press this button for 2 seconds to activate the power saving mode.
- Seat and water temperature will be set at the lowest temperature for saving power.




### Temperature adjustment (water / seat)

- Temperature of seat and water can be adjusted by pressing  
- There are four levels of temperature: Room temp (off) – Low (34 °C) – Medium (37 °C) – High (40 °C).



### Battery Alarm


- Change the batteries if the battery icon on LCD is flickering (front LED will also flicker).

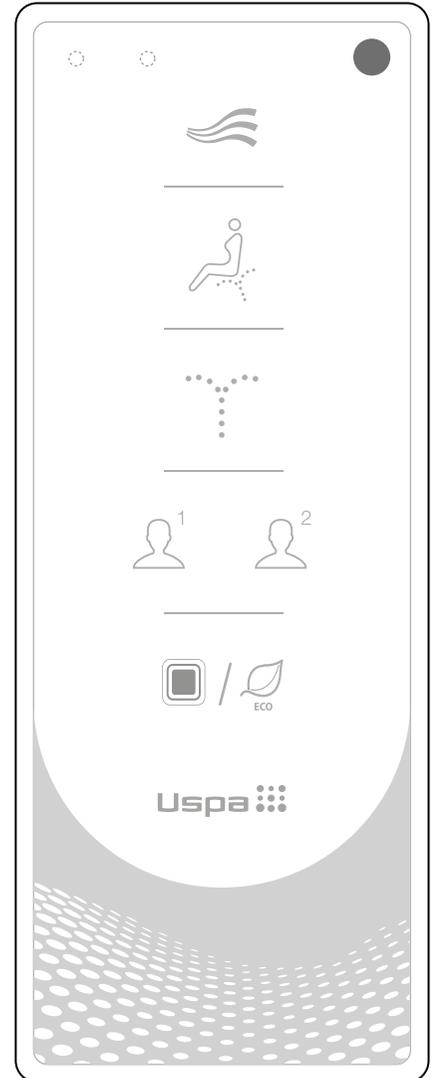

[Front]

## ※ Caution

- Be aware of not dropping the remote control in water. It could be damaged.
- All functions, except “Nozzle cleaning” and “Eco”, can be activated only when the user is seated on the appliance.
- Before operating, ensure that the water tank is filled up completely.

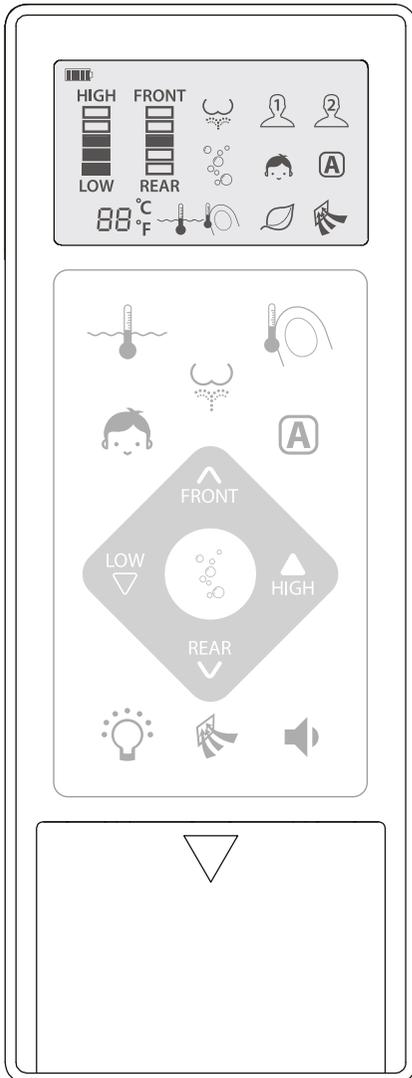

[Rear]



### **Pulsation (massage)**

- Press this button when using “Cleansing” and “Bidet” to activate rhythmical wash with massage effect.
- Press this button again to deactivate this function.



### **Kids**

- Press this button to change all functions to be suitable for children. It will automatically operate 1 minute of cleansing with the oscillating nozzle and 3 minutes of drying. Water pressure (level 1); nozzle position (level 5).
- Kids must use this appliance only under the supervision of an adult.



### **Auto**

- Press this button to activate automatic function (4 minutes long): Cleansing – Oscillation – Pulsation will operate consecutively (1 minute), followed by Drying function (3 minutes).
- Press “Bidet” and “Auto” in sequence if the Auto function is desired in conjunction with the Bidet function.



### **Nozzle position**

- Nozzle position can be adjust (5 levels) by pressing FRONT and REAR.
- After each use, position will be taken to the initial value (level 3).



### **Water pressure / Air temperature**

- Water pressure (5 levels) can be adjusted by pressing LOW and HIGH.
- Air temperature (5 levels) can be adjusted by pressing LOW and HIGH.
- After each use, both levels will be taken to the initial value (level 3).



### **Aerated Spray**

- Press this button to activate aerated spray during “Cleansing”, “Bidet” and “Kids” functions. This functions increase water spray intensity while consuming less water.
- Press again this button to deactivate the function.



### **Courtesy light**

- Press this button to activate/deactivate courtesy light.
- A delicate light will guide the user to identify the device during the night, without having to turn on the bathroom light.



### **Deodorization**

- Press this button during the use of the device. Deodorizer will work automatically for a maximum time of 20 minutes.
- When the user stands up, the function stops after 1 minute.



### **Sound**


- Press this button to enable/disable the beeping sound of the device.

## User setting



- Each button can save 2 settings (Cleansing and Bidet).
- Press User 1 and "Cleansing" or "Bidet" consecutively. Then choose nozzle position by pressing FRONT/REAR buttons and water pressure level by pressing LOW/HIGH buttons.
- Press User 1 again to save, with a beep that will confirm the chosen setting.


(※ The same applies for saving User 2 settings).

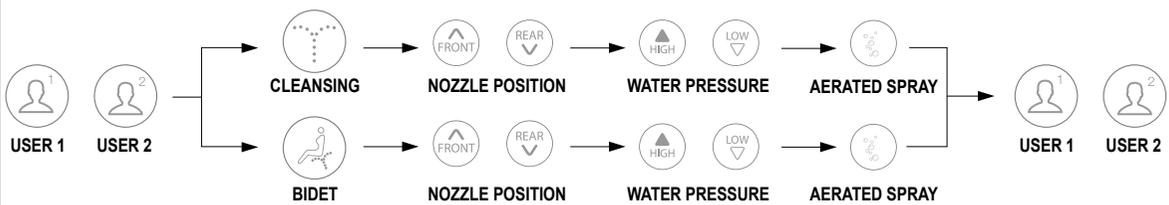

- To recall previously memorized settings, press User 1 or User 2 during "Cleansing" or "Bidet" functions.


## Side control buttons

- It is possible to use the device through side control buttons when the remote control is broken or its batteries are dead.
- Press "Cleansing" on right side or "Bidet" on left side to activate the corresponding functions.
- Press again the button to stop the functions.
- Do not press the buttons with sharp-edged objects.

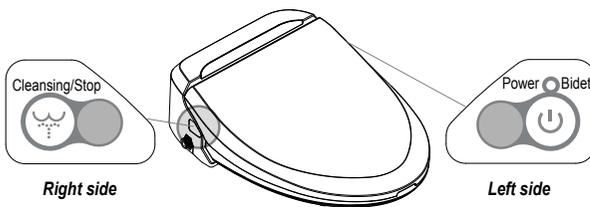

## Identification

- This function is useful for public toilets, when more than one unit of this product is installed.
- To prevent interference among units, main unit and remote control should be set with the same ID.
- If there is only one USPA device with remote control in the bathroom, there is no need to set an ID.
- Initial ID of remote control and main unit is "0". There are 16 ID codes available (00~15).

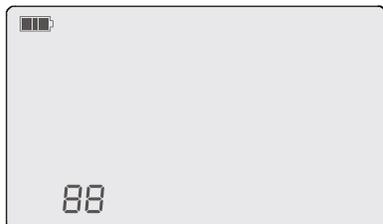

## How to set ID

[REMOTE CONTROL]

- Press "High" (▲<sub>HIGH</sub>) for 3 seconds and the ID will show up in the display.
- Press "High" (▲<sub>HIGH</sub>) or "Low" (▼<sub>LOW</sub>) until your ID appears in the display.
- Press "Stop" to save the ID.

## Set the unit

- After assigning the ID to the remote control, unplug the unit and the plug it back in.
- Press the "Power|Bidet" button on the left side (see picture aside) to turn off the unit.
- Press the "Power|Bidet" button again without releasing (the unit should turn back on at this point).
- While holding the "Power|Bidet" button down, push "Stop" on the remote control for 2 seconds.

## Note

- If the IDs of the remote control and the main unit are different, the remote can't work properly. Make sure that remote control and main unit are set with the same ID.
- The ID will be memorized even when the device is unplugged or when the batteries of the remote control are replaced.

# 7 How to clean

## Nozzle cleaning

**Caution** Do not forcefully push or pull the nozzle. It may result in a damage to the device.

### Manual cleaning

- 1 Make sure that the occupied sensor is not activated (do not sit on the seat or place hands on the seat sensor).
- 2 Press the (FRONT) button for 2 seconds to extract the bidet nozzle. Press the button again to extract the cleansing nozzle.
- 3 Use a toothbrush or soft cloth to clean the nozzle.
- 4 Press "Stop" button to retract the nozzle.




### Auto cleaning

- 1 Press the (REAR) button for 2 seconds to start auto cleaning of the nozzle.
- 2 Press "Stop" button while cleaning to retract the nozzles.

※ Do not use force to push or pull the nozzles while cleaning.

## Strainer maintenance

This appliance will not operate properly if the strainer is clogged. Be sure to clean the strainer regularly.

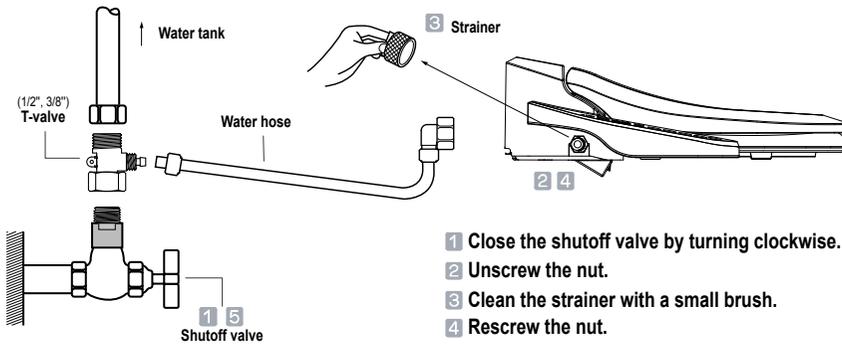


- 1 Close the shutoff valve by turning clockwise.
- 2 Unscrew the nut.
- 3 Clean the strainer with a small brush.
- 4 Rescrew the nut.
- 5 Open the shutoff valve by turning counter clockwise.

## Cleaning the body

Regularly wipe off the seat with a dry soft cloth or sponge, or wash with a damp cloth and mild detergent. Release the lid.

- 1 Pull left and up the left hinge part.
- 2 Release the right hinge part (be aware of your fingers not to be caught). In order to protect the plastic parts, please only use neutral cleansers. (Do not use toilet cleansers, home cleansers, bleach, benzene, paint thinner, cresol (lysol), etc.).

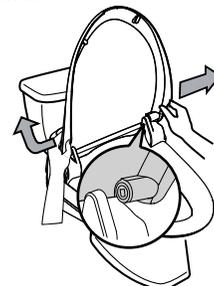


## 8 Maintenance


### Draining water - while not using over extended period of time

**1** Unplug the power supply cord.

- Not doing so may cause fire.

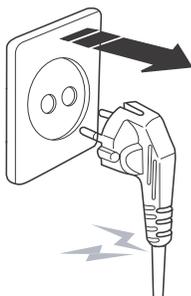

**2** Close the shutoff valve.

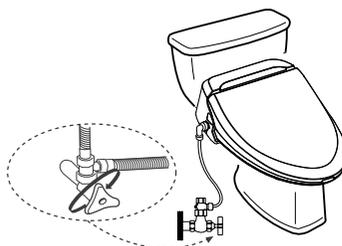


**3** Detach the unit.

- Refer to the installation method.



**4** Uphold the appliance and thoroughly drain the water by unscrewing the drain bolt (beware of losing the drain bolt).

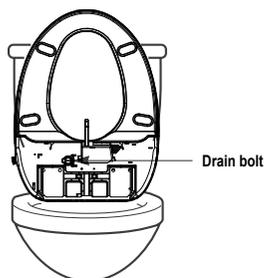


**5** Screw the drain bolt and install the appliance.

- Refer to the trial operation method in order to use this appliance again.

### Preventing freezing

**1** Make sure the power cord is plugged in properly.

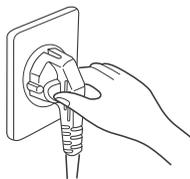

**2** Set the temperature of water to low or middle. (Freezing can be prevented by thermal efficiency of water tank).

- If there is no heating system in the toilet, wrap pipes with cloth or other materials.

**3** Not using the unit for a long time in winter unplug and drain the water from the water tank and pipes thoroughly.

- Refer to the water drain method.

# 9 How to install



Do not plug in until installation is finished completely.  
Not doing so may damage the appliance.

Caution

If electric work is needed, contact a qualified electrician or serviceman only.

## Remove the existing toilet lid and seat


1. Remove the nuts, washers and cone packings from the toilet seat mounting bolts in the back of the toilet
2. Remove the toilet seat, lid and mounting bolts.
3. Keep them in case of installing again.

## Install the appliance

### Installation


#### How to mount the plate

Place the plate and guides over each mounting hole. Insert the mounting bolts respecting the sequence shown in the picture.

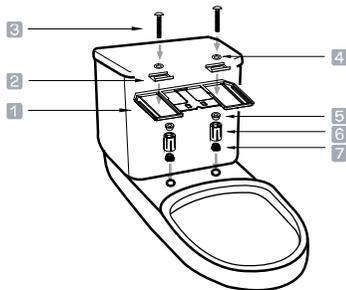

- 1 Mounting plate 2 Bolt guide 3 Mounting bolt  
4 Washer 5 Upper cone 6 Mounting nut 7 Lower cone

#### How to attach and detach the unit

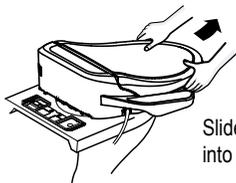


Slide the unit until it clicks into plate.



Lift the unit up and forward.

### Toilet size

- The toilet dimensions must be within those shown below. Do not install this appliance on a toilet that does not meet those dimensional requirements.

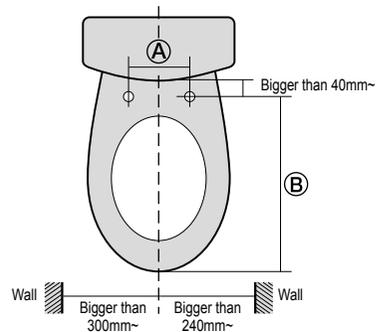


(UNIT: mm)


MODEL	A	B
UB-6635R	140 ~ 240	430 ~ 480
UB-6635RS	140 ~ 240	400 ~ 450
UB-6635RU	140 ~ 240	410 ~ 460

### Occupied sensor

- This appliance is equipped with occupied sensor. Unit will not work unless seat is occupied.

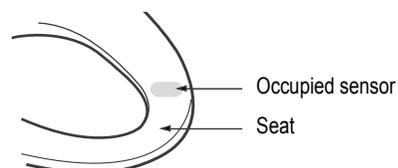

## Connecting the water hose and grounding wire

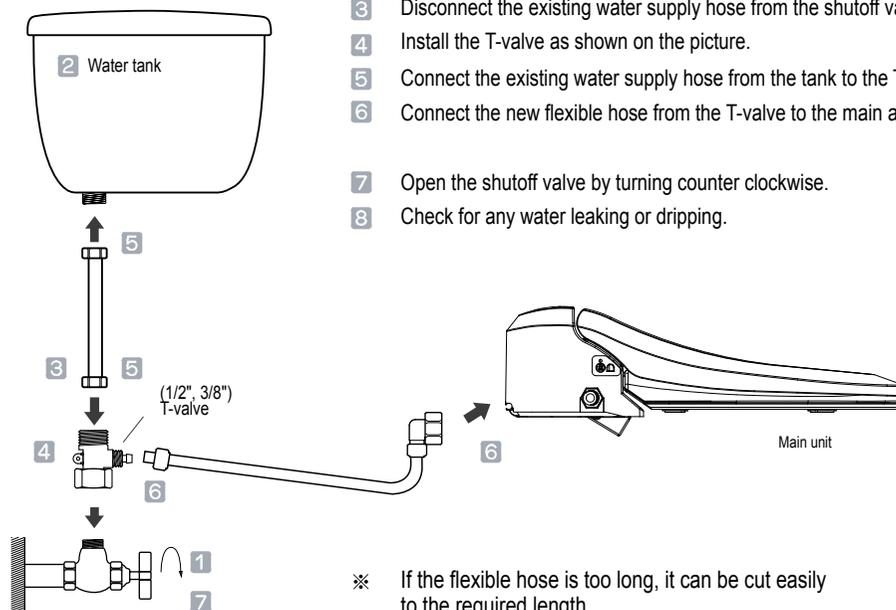

※ If the flexible hose is too long, it can be cut easily to the required length.

## Trial operation

### 1. Preparation

Plug the power cord into the outlet. Press "BIDET" or "CLEANSING", then water tank will be filled within 2 minutes. After the water tank has filled up, you will hear a long buzzer sound.

### 2. Checking all functions

Cover the toilet bowl using the plastic wrapping sheet of the unit to prevent water from being sprayed out of the toilet. Then check for all the functions described in this manual.

### 3. During trial operation there are possibilities of remaining water coming out from the unit while heating.

## 10 Before calling for service

Problem	Possible cause	Solution
Completely fail to work	Is there a power cord outage? Is the power cord unplugged? Are you sitting on the seat correctly?	Check for a power cord failure or a tripped breaker Plug the power cord in properly Sit on the seat completely
Water does not spray	Is the water shutoff valve closed? Is the strainer clogged? Are the nozzles clogged?	Open the shutoff valve Clean the strainer Clean the nozzles
Water is leaking or dripping	Check if all hoses are tightened properly	If water is still leaking or dripping, contact your dealer
Seat, water or air is not enough warm	Is the temperature set to OFF? Is the appliance used in economy mode during a cold weather?	Reset the temperature Release the economy function

## 11 Specifications

Item	UB-6635R	UB-6635RS	UB-6635RU
Standard power supply	220-240 V~ / 50/60 Hz, 1160-1380 W		
Water supply	Way of connection	Direct connection to tap water	
	Water pressure	0.08 MPa ~ 0.74 MPa	
Cleansing	Spray for cleansing	900 ± 100mℓ/min	
	Spray for bidet	900 ± 100mℓ/min	
	Water capacity	800mℓ	
	Spray temperature	Room temp ~40 °C (104 °F)	
	Heat capacity	220-240 V~ / 1100-1309 W	
Safety feature	Thermal switch, Temperature fuse, Floating switch		
Dry	Air temperature	Off ~ 60 °C	
	Heater capacity	220-240 V~ / 280-333 W	
	Safety feature	Temperature fuse, Bimetal	
Heated seat	Seat temperature	Room temp ~40 °C (104 °F)	
	Heater capacity	220-240 V~ / 55-65 W	
	Safety feature	Temperature fuse	
Deodorization method	Active carbon filter		
Length of power cord	1.5 m		
Dimensions	(W)392mm x (L)520mm x (H)145mm	(W)392mm x (L)490mm x (H)145mm	(W)392mm x (L)504mm x (H)145mm
Weight	4.4 kg	4.3 kg	4.4 kg

※ Recommended water supply pressure are 0.1 MPa~0.69 MPa.

※ The minimum available water supply pressure is 0.08 MPa~0.1 MPa, however under 0.1 MPa water spray pressure might not be strong enough.

# WARRANTY

## USPA Personal Hygiene Appliance Limited Warranty

- We warrant our products to be free from manufacturing defects under normal use and service for a period of two (2) years from date of your purchase. Only the ORIGINAL PURCHASER may make a claim under this limited warranty.
  - Our obligation to you under this warranty is limited to repair or replacement, at our option, of defective products or parts, provided that the products were properly installed and used in accordance with instructions. We reserve the right to make inspections in order to determine the cause of the defect. We will not charge for labor or parts in connection with warranty repairs or replacement. We are not responsible for the cost of removal, return and/or reinstallation of products.
  - This limited warranty does not apply to:
    - a) Damage or loss from fire, earthquake, flood, storm, etc.
    - b) Damage or loss resulting from any unreasonable use, abuse, negligence or improper maintenance.
    - c) Damage or loss from improper installation, removal, repair, or modification.
    - d) Damage or loss resulting from sediment or other matters contained in your water system.
  - This warranty gives you specific legal rights.
  - For warranty or service information, please contact your dealer where you bought this appliance or please contact us.
  - Only the original purchaser may submit a claim under this limited warranty. To activate your warranty, complete this form.
  - This limited warranty is our only warranty covering your product. Repair or replacement as provided under this warranty shall be the exclusive remedy available to you. We shall not be responsible for loss of the product or for other incidental, or consequential damage or expenses you may incur or for labor or other costs due to installation or removal or cost or repairs by others, or for any other expense not specifically stated above. Except to the extent prohibited by appliance law, any implied warranties, including that of merchantability or fitness for use are expressly limited to the duration of this warranty.
- ※ Warning! We are not responsible or liable for any failure of or damage to this plumbing product component caused by in-tank bowl cleaners containing chlorine (calcium hypochlorite).
- ※ Note: the use of high concentration of chlorine related products can seriously damage the fittings. This damage can cause leakage and serious property damage.

For more information, please contact your dealer or us.

Full name \_\_\_\_\_ Vendor \_\_\_\_\_

Purchase date \_\_\_\_\_ Unit serial Nr. \_\_\_\_\_

Address \_\_\_\_\_ ZIP and City \_\_\_\_\_

Country \_\_\_\_\_ Phone \_\_\_\_\_ E-Mail \_\_\_\_\_

Mail, email or fax the warranty form to:

Or register your product online:

<https://uspa.eu/en/support/register-your-product>

**USPA EUROPE S.R.L.**  
CORSO DELLA VITTORIA, 14  
28100 NOVARA - ITALY  
TEL: +39 0321 030449  
<http://www.uspa.eu>  
[info@uspa.eu](mailto:info@uspa.eu)



*Great products for your healthy living!*

# MEMO

# MEMO

# INUS

## **INUS CO., L.T.D.**

350-41, TANGJEONG-MYEONRO,  
TANGJEONG-MYEON,  
ASAN, CHUNGCHEONGNAM-DO, KOREA  
[www.inushaus.com](http://www.inushaus.com)

## **USPA EUROPE S.R.L.**

CORSO DELLA VITTORIA, 14  
28100 NOVARA - ITALY  
T.: +39-0321-030449  
F: +39-0321-031648  
[www.uspa.eu](http://www.uspa.eu)  
[info@uspa.eu](mailto:info@uspa.eu)